

Copyboard CR-5 Operation Quick Guide

Storing in USB Memory



Switch on the power.



Start the save operation.




During operation, the segments flash successively.

Data output

Unplug the USB memory before switching off the power. (There is a reminder function for unplugging the USB memory stick.)

This Quick Guide provides a description of the operating procedure. For details, see the user's manual.

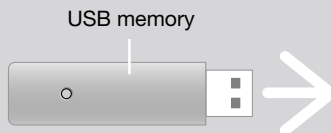



USB port (Type A)

(On the side of the copyboard.)

This is used to store images scanned from the copyboard onto a commercially available USB memory device. It is also used to connect the separately sold printer.

Check the direction of the USB memory device and USB connector before inserting.

When the copyboard is mounted on the stand vertically

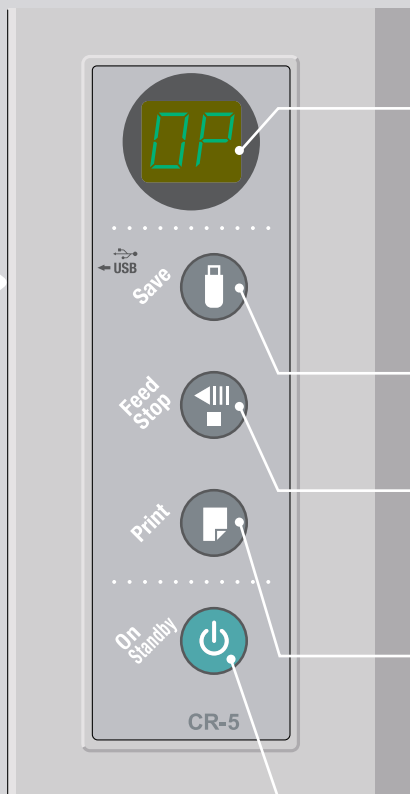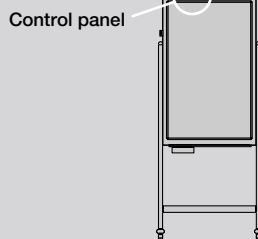

When pressing a button, please press the center area (i.e., the round and protruding portion). The button may not work if it is pressed on a corner.

Display window

The status of connection between the copyboard and computer, the operating status and error information are indicated here.

"PC" is displayed when the Copyboard is connected with a personal computer. Note that "OP" is displayed when the Copyboard is not connected with a personal computer.

Save button (USB memory storage)

Moves a one-screen portion of sheet and reads it, then stores the data on a USB memory.

Feed/Stop button

When pressed, the sheet surface moves one sheet's worth then stops automatically.

When pressed while the sheet surface is moving, the sheet surface stops.

Print button

Moves the sheet one screen portion and reads it, and prints the image.

* Only used when a separately sold printer is connected.


ON/Standby button

Turns the Copyboard's power on and off(standby mode).

Error Messages

When a flashing display appears in the display window of the control panel, it will be indicating one of the following error conditions. Error messages will flash for 5 seconds (however, after flashing, "E4", "E5" and "E6" will change to being lit steadily). Please check with "Meaning of Error Messages" in the user's manual.

- E1** Printer not connected
No printing paper
Printer problem
- E2** USB memory not recognized
- E3** USB memory storage problem
- E4** Reading problem
- E5** System error
- E6** Page detection error
- ES** Security protection
- US** USB memory not inserted
- FL** USB memory is full
- EL** An unsupported printer is connected

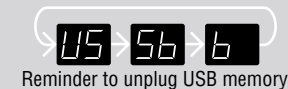

To print

1. Connect the printer's USB port with the copyboard's USB port using the USB cable.
2. Turn on the printer's power.
3. Turn on the copyboard's power.
4. Press the "Print" button on the copyboard.
Printing starts.

Sheet Surface Cleaning

Please be sure to use the PLUS dedicated markers and eraser in order to maintain the board surface clean and erasable. When the erasing surface of an eraser has become soiled, exchange the sponge with a spare one, and then use.

■ DEDICATED MARKER : 44-070(Black), 44-071(Red), 44-072(Blue), 44-073(Green)

■ DEDICATED ERASER : PLUS BOARD ERASER ER-44369

When the sheet has become soiled, wiping it with a moist cloth that has been wrung well, then before the sheet surface has dried wipe it dry with a soft, clean, dry cloth. After cleaning, allow the sheet to dry completely before use.

Do not use heavily soiled erasers, wet tissue, office cleaners, neutral detergent, or other cleaners.

PLUS Vision Corp.

1033-1, Oshitate, Inagi-shi, Tokyo, 206-0811 JAPAN

www.plus-vision.com

email:plusvision@plus.co.jp